

# bosal

**Инструкция по монтажу  
тягово-сцепного устройства  
шарового типа 1171 А  
для автомобилей  
Opel Astra  
sedan**

	2007-...
	1300
	60
	17,2



462800,

« - »  
18  
: (35363) 7-05-06  
/ : (35363) 7-13-20  
(495) 785-66-07  
www.bosal-autoflex.ru

« - »  
" (8182) 22-48-15  
" 8(8442) 98-74-98  
" 8(343) 379-39-89, 373-42-73  
" 8(343) 26-88-308  
" 8(3952) 710-194  
" 8(495) 777-54-59  
" 8(495) 745-79-11  
" 8(495) 788-95-97  
" 8(495) 720-51-03  
" 8(3532) 57-99-85  
" 8-905-899-5012  
" 8(383) 291-59-60  
" 8(831) 279-53-24  
" 8(3422) 98-27-20  
" 8(342) 220-87-87  
" 8-927-002-90-06  
" 8(3462) 24-00-44  
" 8(3842) 21-14-76  
" 8-902-940-4151  
" 8(3452) 32-22-12, 41-52-62  
" 8-961-213-0278  
" 8-917-347-1700  
" 8(351) 269-44-75, 900-72-73  
" 8(3512) 773-76-91

41.55-2005.

« »

« »


!

Can-Bus,  
: 022-638.

Smart-

Connect

10 = 46 ; 12 = 79 . 1000

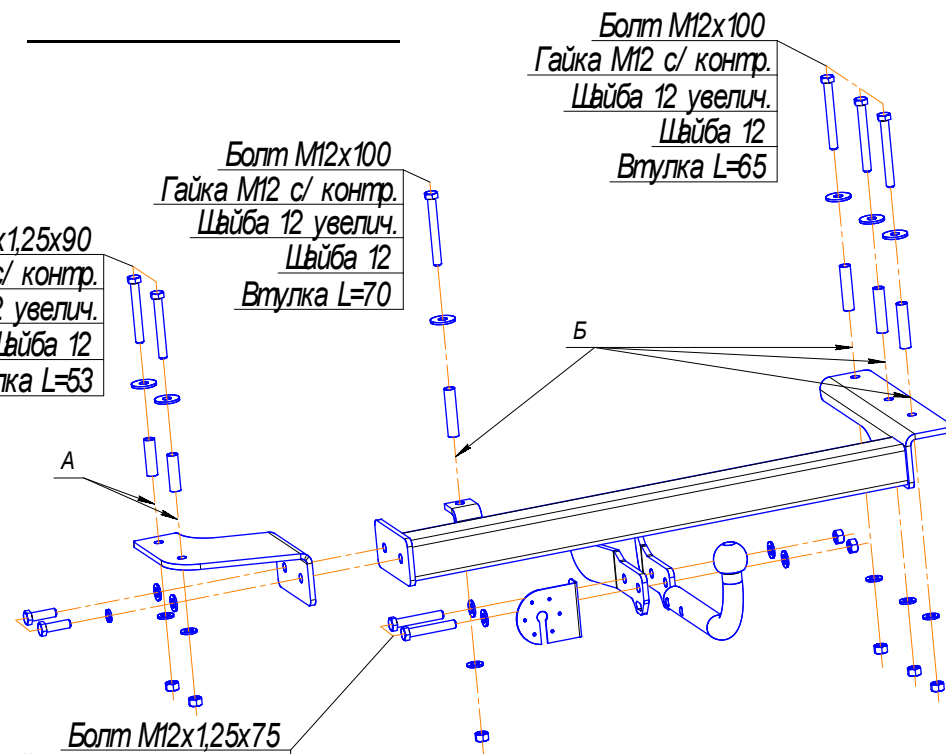

	1
	1
	1
	1

12 1,25 75	2
12 1,25 90	2
12 100	4
12 40	2
12 1,25 /	4
12 /	5
12	13
12	6
12	6
L=53	2
L=65	3
L=70	1
VH0829	1
	1
	1
	1
190	1
	1

