

bosal

Инструкция по монтажу тягово-сцепного устройства шарового типа 6455 А для автомобилей Ssang Yong Actyon

| | |
|---|-------------|
| | 01.2010—... |
| | 1500 |
| | 2260 |
| | 75 |
| | 50 |
| D | 8.85 |
| | 20 |



462800,


« - »
/ : (35363) 7-05-06
: (35363) 7-13-20
(495) 785-66-07

www.bosal-autoflex.ru


18

| | |
|--------|-------------------------------|
| « - »: | " (8182) 22-48-15 |
| " | " 8(8442) 98-74-98 |
| " | " 8(343) 379-39-89, 373-42-73 |
| " | " 8(343) 26-88-308 |
| " | " 8(3952) 710-194 |
| " | " 8(495) 777-54-59 |
| " | " 8(495)745-79-11 |
| " | " 8(495) 788-95-97 |
| " | " 8(495) 720-51-03 |
| " | " 8(3532) 57-99-85 |
| " | " 8-905-899-5012 |
| " | " 8(383) 291-59-60 |
| " | " 8(831) 279-53-24 |
| " | " 8(3422) 98-27-20 |
| " | " 8(342) 220-87-87 |
| " | " 8-927-002-90-06 |
| " | " 8(3462) 24-00-44 |
| " | " 8(3842) 21-14-76 |
| " | " 8-902-940-4151 |
| " | " 8(3452) 32-22-12, 41-52-62 |
| " | " 8-961-213-0278 |
| " | " 8-917-347-1700 |
| " | " 8(351) 269-44-75, 900-72-73 |
| " | " 8(3512) 773-76-91 |

41.55-2005.

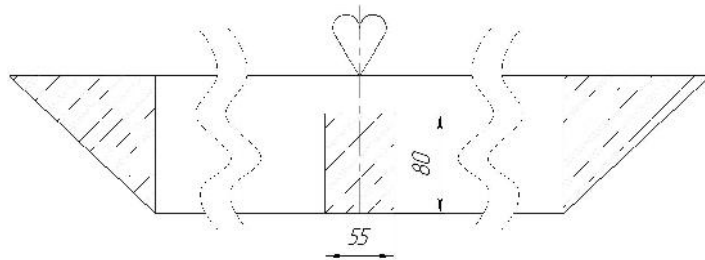

| | | | |
|---|--|--|--|
| | | | |
| 1 | | | |
| 2 | | | |
| 3 | | | |
| 4 | | | |
| 5 | | | |
| 6 | | | |
| 7 | | | |

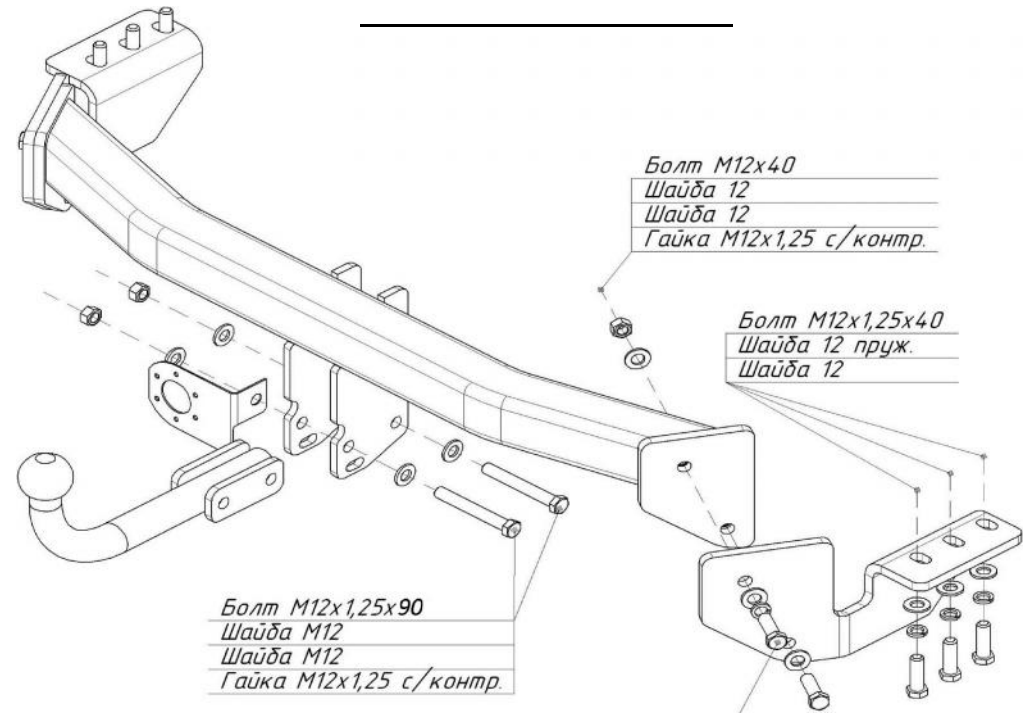

Болт M12x40
Шайба 12
Шайба 12
Гайка M12x1,25 с/контр.

Болт M12x1,25x40
Шайба 12 пруж.
Шайба 12

Болт M12x1,25x90
Шайба M12
Шайба M12
Гайка M12x1,25 с/контр.

Болт M12x40
Шайба 12 пруж.
Шайба 12

| | | |
|--|---|---|
| | 1 | . |
| | 1 | . |
| | 1 | . |
| | 1 | . |
| | 1 | . |

| | | | |
|------------|---|----|---|
| | 1 | 1 | . |
| 12 1,25 40 | | 6 | . |
| 12 40 | | 4 | . |
| 12 1,25 90 | | 2 | . |
| 12 / | | 2 | . |
| 12 1,25 / | | 2 | . |
| 12 | | 8 | . |
| 12 | | 14 | . |
| VH0829 | | 1 | . |
| | | 2 | . |
| | | 1 | . |
| | | 1 | . |

Схема обрезки кабеля

